

COT ASSEMBLY INSTRUCTIONS

STEP 1: Take all parts out of the cartons, as well as the plastic bags with the screws. Use the drawings to help you assemble the cot.

STEP 2: Lay the mattress base (**part1**) on the ground.

STEP 3: Put the headboard (**part2**) and foot panel (**part3**) in an upright position. Insert the “C” roll nuts into the holes on the outer side of the mattress base (**detail I**). Fasten the “B” screws (**detail I**) to attach the mattress base (**part 1**) to the headboard (**part 2**) and foot panel (**part 3**).

STEP 4: Turn the bed side down. Fasten the side rails (**part 4&5**) on the headboard (**part2**) and foot panel (**part 3**), using the “A” screws to the holes on the top and the bottom of both its sides.


STEP 5: In order to attach the castor wheels, use a hammer to put the “D” pin into the holes at the bottom of the headboard (**part 2**) and foot panel (**part 3**). The "striped" part of the “D” pin goes into the hole. Buckle the castor wheels onto the protruding part of the “D” pin. Put a set of one plain and one brake castor wheel on each side. Set the bed back in an upright position.

NOTES:

- The screws should be securely fastened. Neither too loose, nor too tight.
- Maximum mattress height 10cm.
- Keep the bed away from any heating source or fire.

MATERIALS:

- Beech Wood
- Various plastic and metallic parts
- Polyurethane varnishes (human safe)

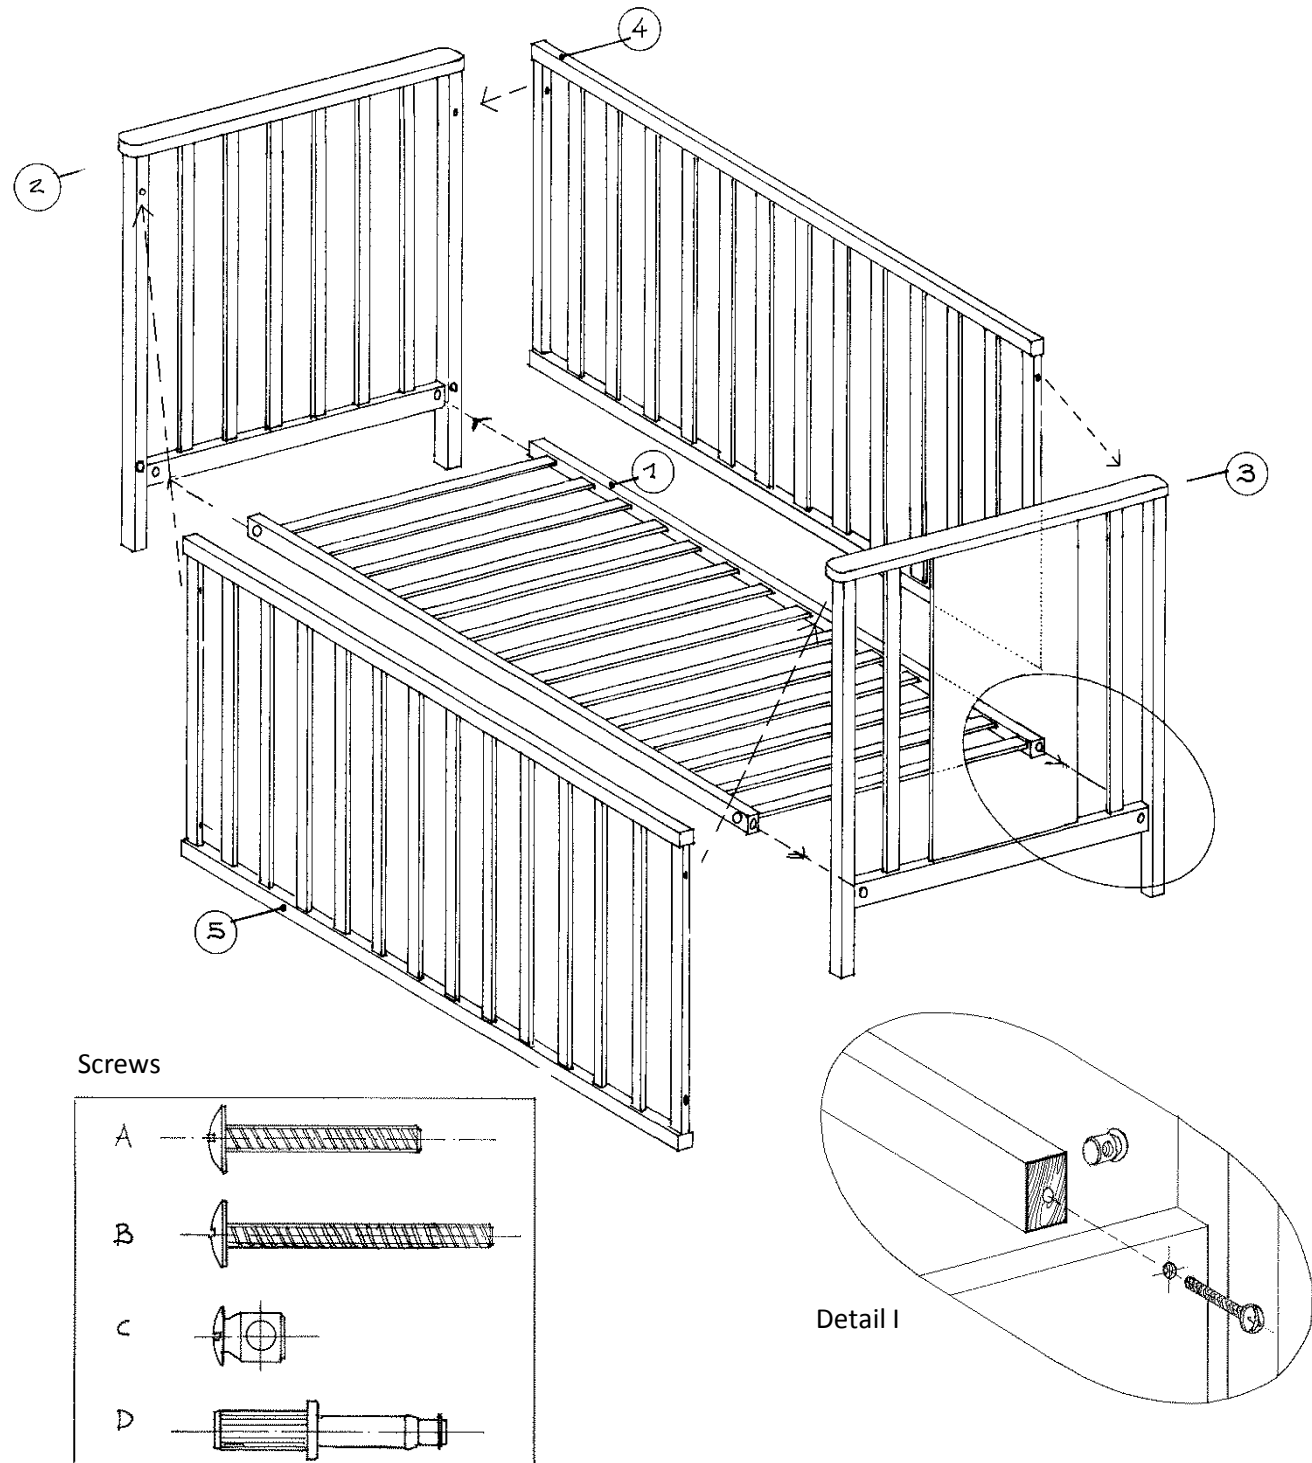


MATTRESS BASE ADJUSTMENT

In order to use the upper mattress base position, follow the instructions below and use the drawings to help you.

STEP 1: Lay the mattress base (**part 1**) on the ground.

STEP 2: Attach the plastic adaptor (**detail II**) to the side of the headboard and foot panel (**part 2&3**) using the “A” screws packed with the plastic adaptor (**detail II**).

STEP 3: (See drawing on page 1) Insert the “C” roll nuts into the holes on the outer side of the mattress base (**detail I**). Put the headboard (**part2**) and foot panel (**part3**) in an upright position. Fasten the adaptor to the mattress base using the “A” screws packed with the plastic adaptor (**detail II**). Continue with “**STEP 4**” to “**STEP 6**” from **page 1**.

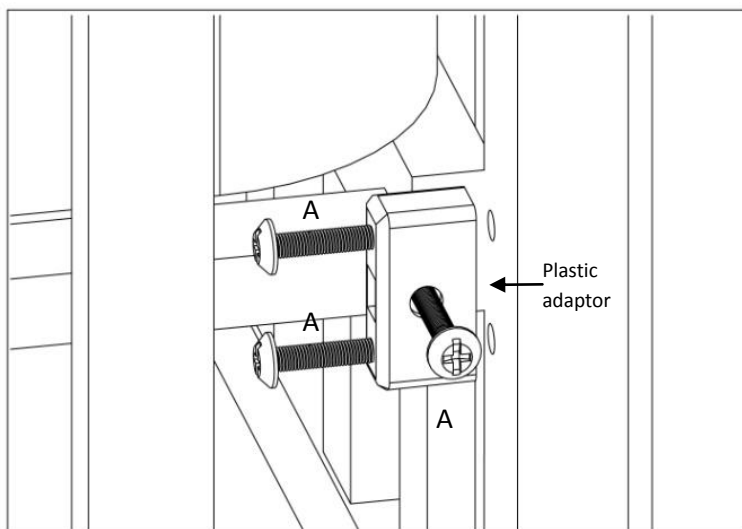

licno