

## Cot bed Assembly instructions (toddler bed)

If the bed is already assembled and in use, start from Step 1.

If the bed not assembled (in original packaging) skip Step 1 and start from Step 2.

**STEP 1:** Place the bed in an upright position, with the headboard (**part 1**) on the ground. Disassemble the bed by unscrewing the side rails, the mattress base and the cradle feet. Begin with the screws on the headboard (**part 4**). Remove the foot panel, the side rails and the mattress base.

**STEP 2:** Lay the headboard (**part 1**) on the floor, the side with the mounting holes up. Place the mattress base (**part 2**) vertical on the headboard. Use the "A" screws to attach the mattress base on the headboard, choosing the middle mattress base position (**detail I, detail II**).

**STEP 3:** Insert the «C» dowels into the outer holes at the ends of the side bars (**part 3**), leaving 2cm protrude (**detail II**).

**STEP 4:** Place the side bar (**part 3**) vertically onto the headboard (**part 1**) and attach it by inserting the «C» dowels into the appropriate holes (**detail II**). In the same way attach the second side bar on the opposite side of the headboard.

**STEP 5:** Place the footpanel (**part 4**) on top of the side bars (**part 3**) and mattress base (**part 2**), the side with the mounting holes down. The «C» dowels must be inserted into the appropriate holes. Then, use the "A" screws to attach the mattress base to the foot panel (**detail II**). Fasten the "B" screws from the outer surface of the foot panel in order to secure the side bars (**detail II**).



**STEP 6:** Make sure that all the screws are properly fastened and turn the bed in an upright position. Fasten the "B" screws from the outer surface of the headboard (**part 1**), in order to secure the other end of the side bars (**part 3**).

### NOTES:

- The screws should be securely fastened. Neither too loose, nor too tight.
- Maximum mattress height 10cm
- Keep the bed away from any heating source or fire.

### MATERIALS:

- Beech Wood
- MDF
- Various plastic and metallic parts
- Polyurethane varnishes (human safe)

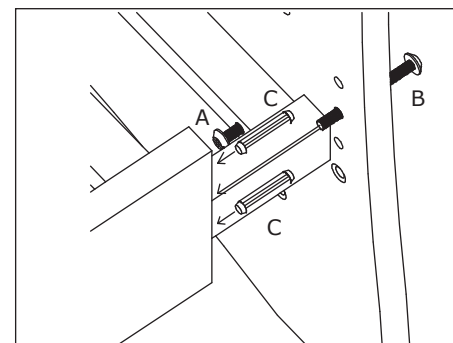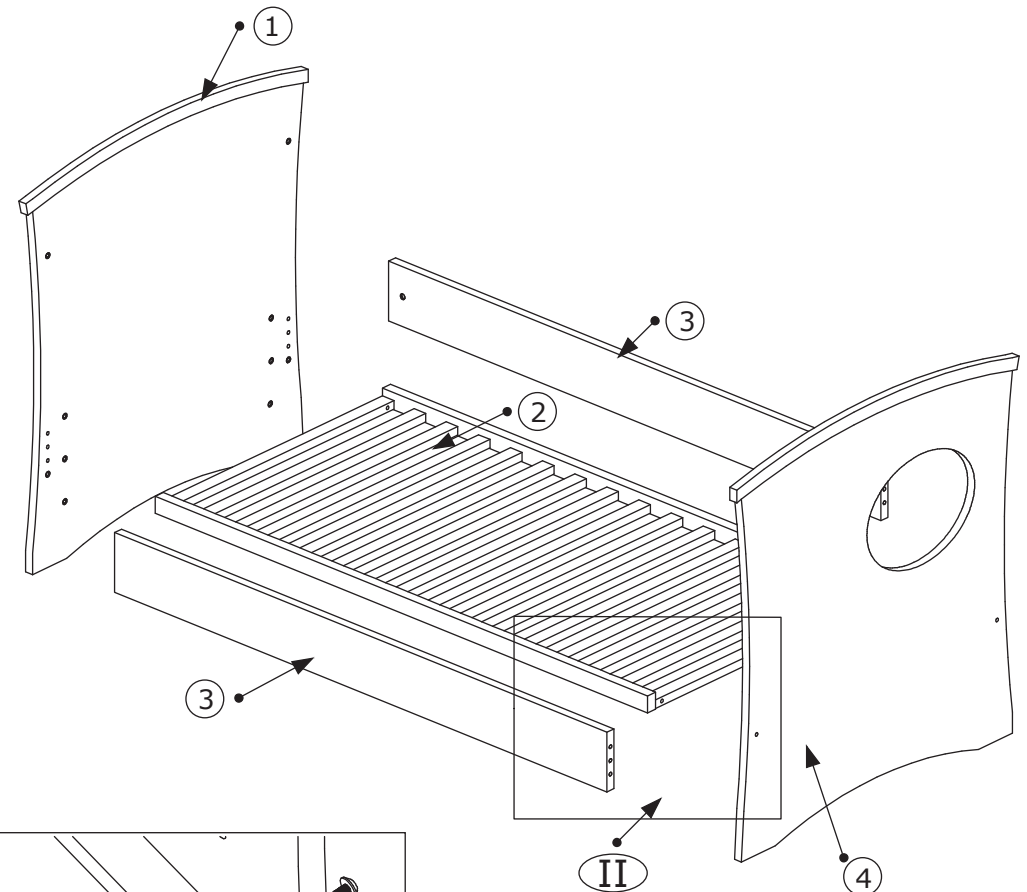

Detail II

## Cot bed-cradle Assembly Instructions (newborn)

# licno

**STEP 1:** Take all parts out of the cartons, as well as the plastic bags with the screws. Use the drawing beside to help you assemble the bed.

**STEP 2:** Lay the headboard (**part 1**) on the floor, the side with the mounting holes up. Place the mattress base (**part 2**) vertical on the headboard. Use the "A" screws to attach the mattress base on the headboard (**detail I**). You can choose one of the three available mattress base positions (**P1, P2, P3/detail I**) according to the baby's age.

**STEP 3:** Place one of the side rails (**part 3**) vertically on the headboard. Use the "A" screws to attach the side rail on the headboard (**detail I**).

In the same way attach the second side rail (**part 3**) on the opposite side of the headboard.

**STEP 4:** Place the foot panel (**part 4**) on top of the side rails (**part 3**) and mattress base (**part 2**). The side with the mounting holes down. Attach the foot panel to the side rails and the mattress base using the "A" screws.



**STEP 5:** (If you wish to use the bed as a cot, skip **Step 5**)

In order to attach the castor wheels, use a hammer to put the «D» pin in the holes at the bottom of the headboard and foot panel (cradle feet, **part 5**). The "striped" part of the «D» pin goes into the hole. Buckle the castor wheels onto the protruding part of the «D» pin. Put set of one plain and one brake castor wheel on each side.


**STEP 6:** Make sure that all the screws are properly fastened and turn the bed in an upright position. The bed is ready to use.

### NOTES:

- The screws should be securely fastened. Neither too loose, nor too tight.
- Maximum mattress height 10cm
- Keep the bed away from any heating source or fire

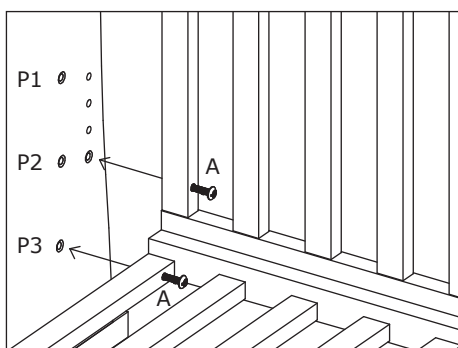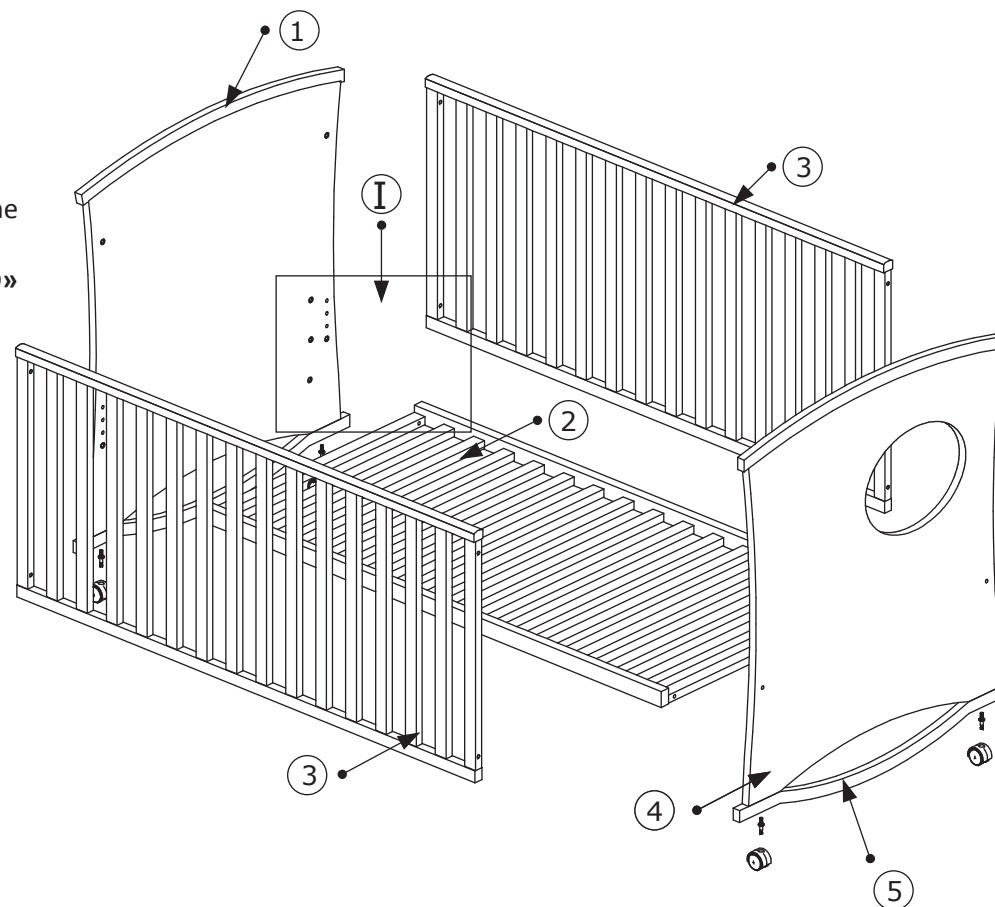

Detail I

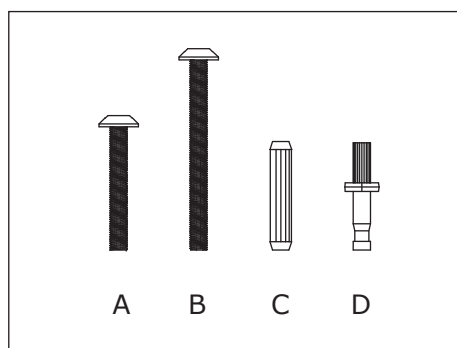

Screws