


## Mosquito net Arm assembly instructions

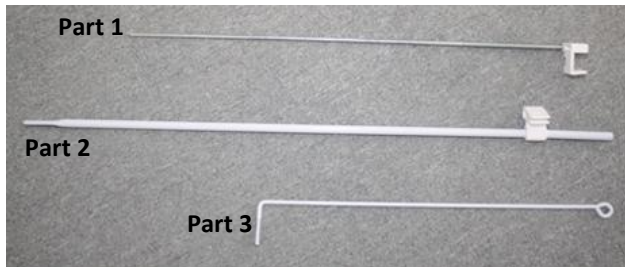

# lieno

**STEP 1:** Buckle “part1” on the bottom rail of the side panel, preferably in the middle.



Image 1

**STEP 2:** Place “part 2” on top of “part 1”. Insert “part 1” in “part 2”.



Image 3

**STEP 3:** Push the plastic peg on “part 2” to clasp it on a spindle. Adjust the height by moving “part 2” up or down on the spindle.



Image 5

**STEP 4:** Insert “part 3” on top of “part 2”. The mosquito net arm is ready to use.



Image 7



Image 2



Image 4



Image 6



Image 8

